



Toplotna i  
zvučna  
izolacija  
plafona na  
objektima

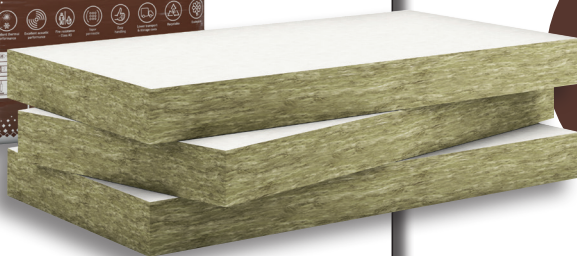

URSA  
TERRA  
62 Ph/VvVk

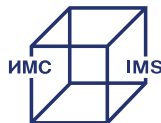

URSA d.o.o.

Milutina Milankovića 25, 11070 Novi Beograd

Uslužni telefon: 011 / 6137 548

Prodaja: T/F: 011/6137 480

[www.ursa.rs](http://www.ursa.rs)



## IZOLACIONE PLOČE OD MINERALNE STAKLENE VUNE

**Ploče su posebno namenjene za toplotnu i zvučnu izolaciju plafona:**

- garaža
- radionica
- prostora za skladištenje

### Karakteristike:

- potpuno vodoodbojna (impregnirana)
- negoriva
- sa prednje strane je kaširana sa belim armiranim staklenim voalom
- sa zadnje strane je kaširana sa žutim armiranim staklenim voalom



## URSA TERRA 62 Ph/VvVk



| Tehnični podaci                        | Vrednost                  | Standard   |
|--|---------------------------|------------|
| Toplotna provodljivost ( $\lambda_b$ ) | 0,032 W/mK                | EN 13162   |
| Klasa gorivosti                        | A1                        | EN 13501-1 |
| Linearni otpor strujanju vazduha       | > 10 kPa s/m <sup>2</sup> |            |
| Granična temperatura upotrebe          | 200°C                     |            |

|   |      |      |      |      |      |
|---|------|------|------|------|------|
| Debljina [mm]                             | 80   | 100  | 120  | 140  | 160  |
| Širina [mm]                               | 600  | 600  | 600  | 600  | 600  |
| Dužina [mm]                               | 1200 | 1200 | 1200 | 1200 | 1200 |
| Toplotni otpor $R_0$ [m <sup>2</sup> K/W] | 2,50 | 3,10 | 3,75 | 4,35 | 5,00 |

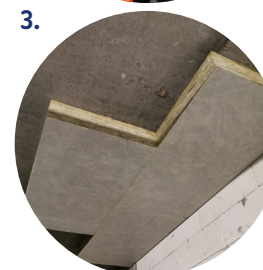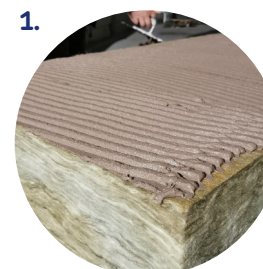

### UGRADNJA

**1.** Na zadnju stranu koja je kaširana sa žutim staklenim voalom nanesite cementni lepak za mineralnu vunu.

Cementni lepak lagano razmažite po celoj površini, tako da biste dobili sloj od 10-milimetara. Za nanošenje je potrebna nazubljena gleterica.

Cementni lepak ne nanositi na vidjive delove ploče.

**2.** Ploču postavite tako, da izravnate stranicu sa lepkom i celu ploču nežno pritisnete na plafon.

Najbolje je, da postavljenu ploču pritisnete čistm neupotrebjenom pločom, koju ćete upotrebiti za postavljanje ostalih ploča.

**3.** Ploče postavljamo smicanjem sledećeg reda ploča za pola dužine, da bi izbegli krstaste spojeve.